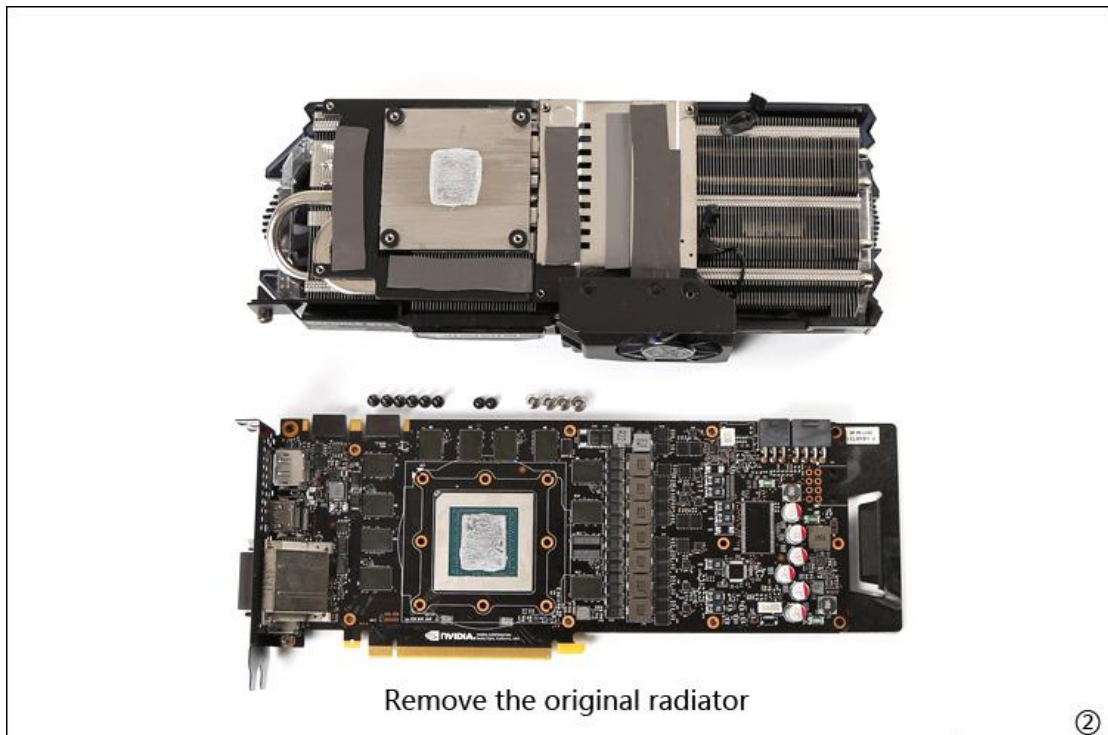# GPU Water Block(INNO3D ichll GTX1080Ti/1080/1070)

BS-INI1080T-PA

Remove the red position screw

①

Remove the original radiator

②

Clean up and reapply GPU core thermal grease
In the water block floor with good thermal grease

③

Attention to red position screw for installation drawing
Purple position mounting spring screw

④
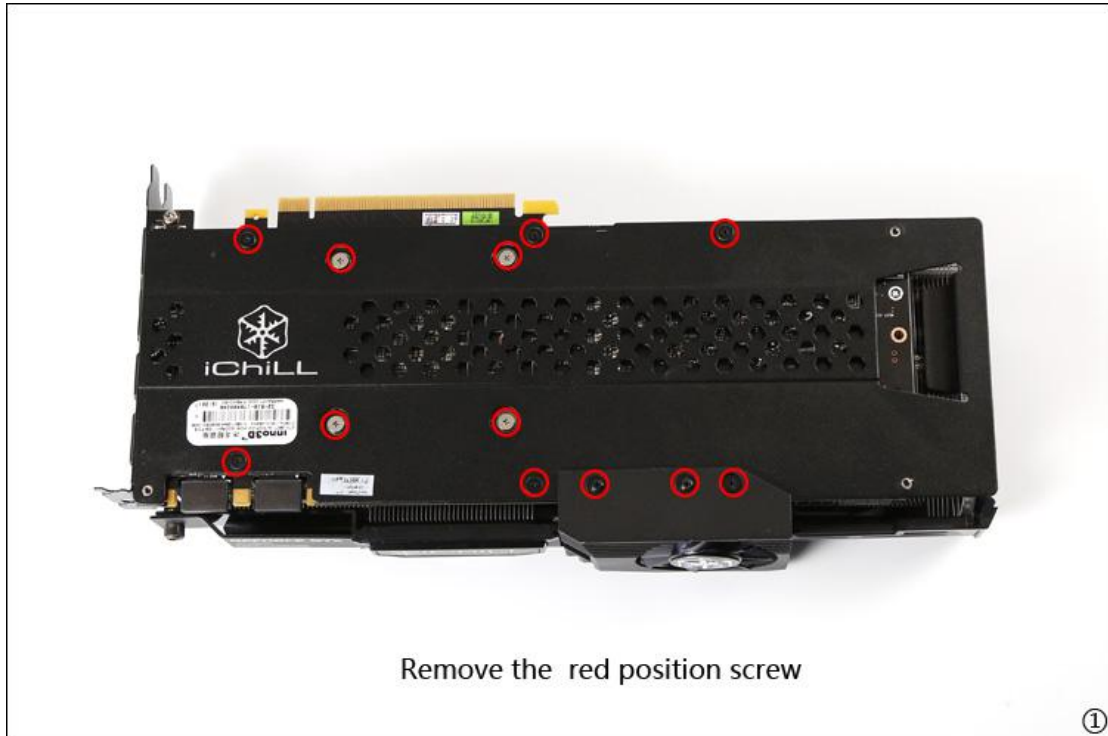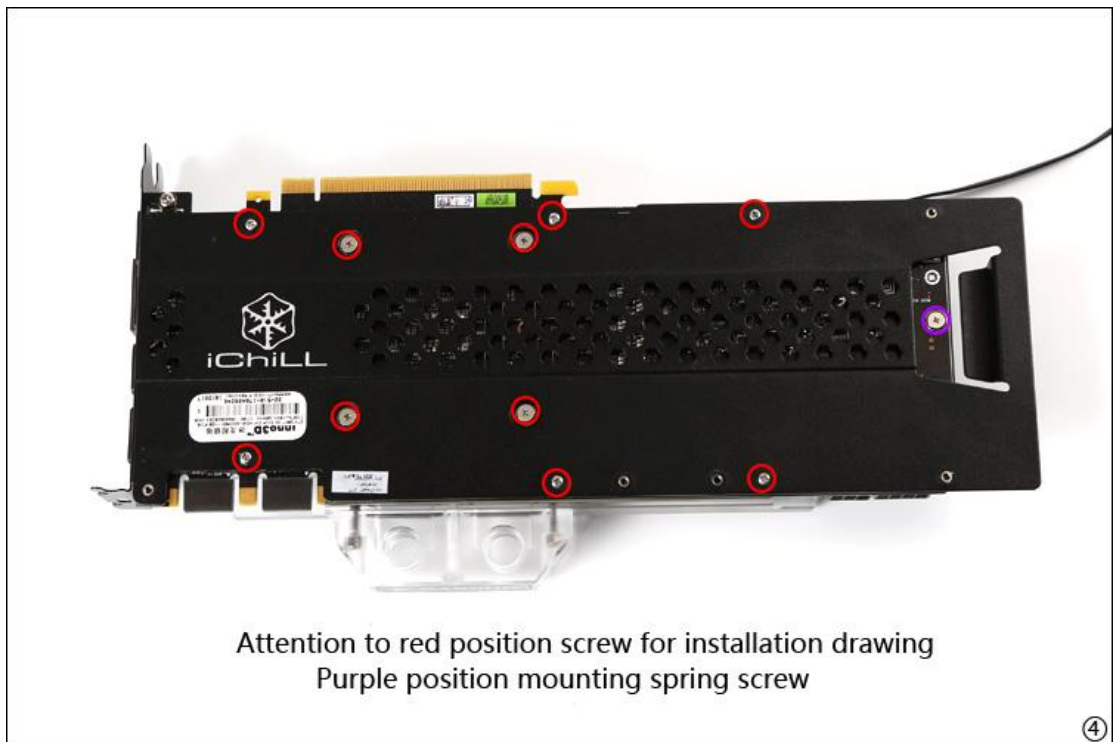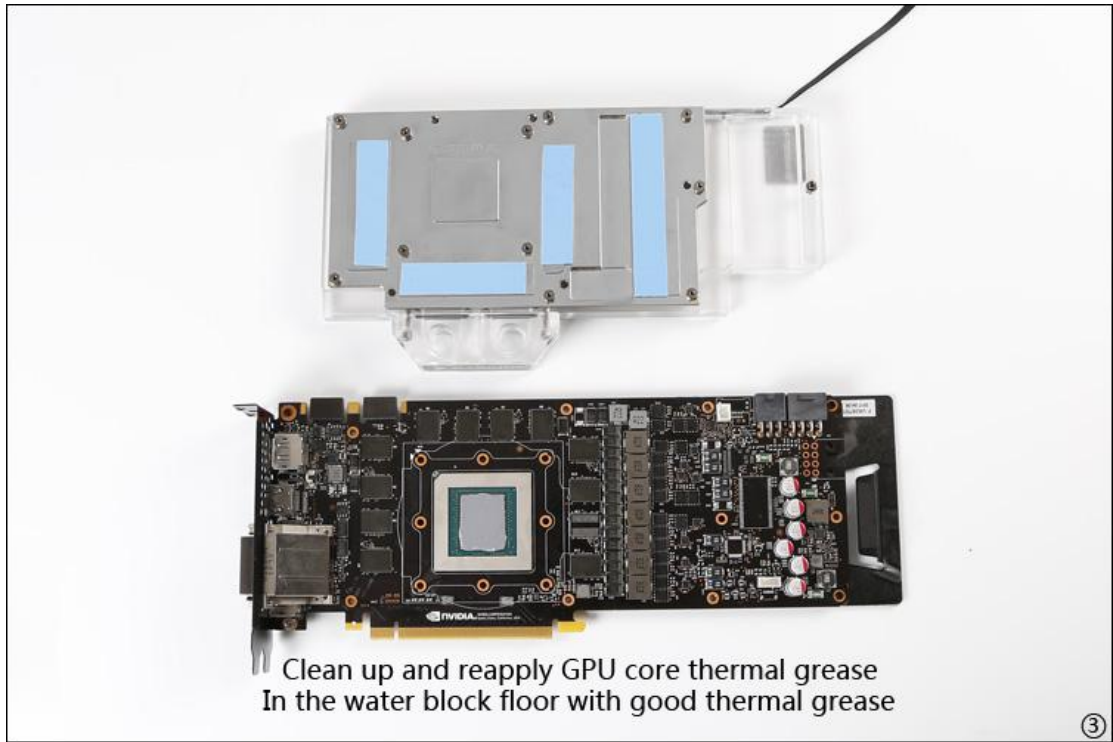
installation is complete

⑤